




ASSEMBLY HARDWARE

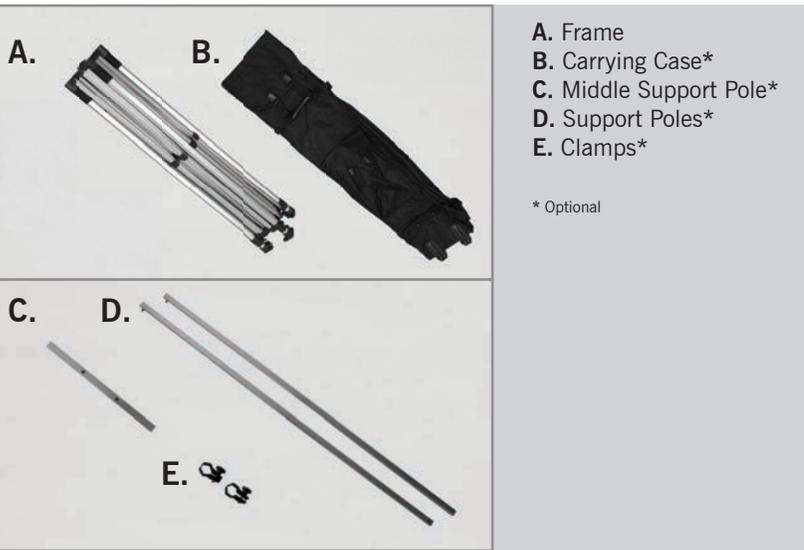


- A. Frame
- B. Carrying Case*
- C. Middle Support Pole*
- D. Support Poles*
- E. Clamps*

* Optional



ASSEMBLY

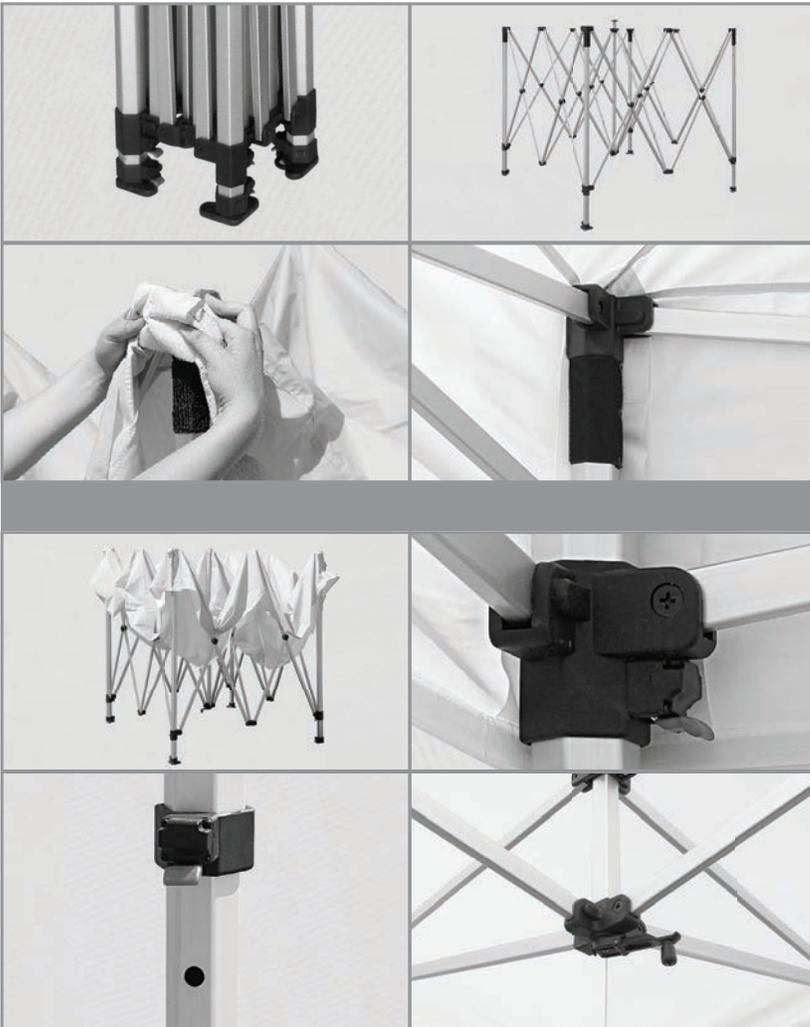

NOTE: It is recommended to use at least two people for the tent assembly.

1. Place the frame (A) into the location chosen for assembly. Make sure the feet of the frame (A) are on the ground.
2. Expand the frame (A) outward, but not fully, and place the print over the frame (A). Make sure the print is facing the correct direction and the corners of the print line up with the correct corners of the frame (A).
3. Wrap the hook-and-loop adhesive tabs, located on the inside of the print, around all the main posts on the frame (A).
4. Completely expand the frame (A) outward. The locking clips will snap into place to indicate full expansion of the frame (A).
5. Pull up the legs of the tent to the desired height, making sure the locking clips snap into place. Standing on base during this step makes it easier.
6. Extend the canopy to full height by using the rooftop crank adjustment. It will also tighten the print for a wrinkle-free display.




Do not display your Advertising Tent in extreme winds and/or thunderstorms. Do not display near overhead wires. User must read and observe Assembly Instructions. If this is not done correctly, it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if the Advertising Tent's hardware is used with any print not produced by us.






ASSEMBLY OF WALL(S) - OPTIONAL

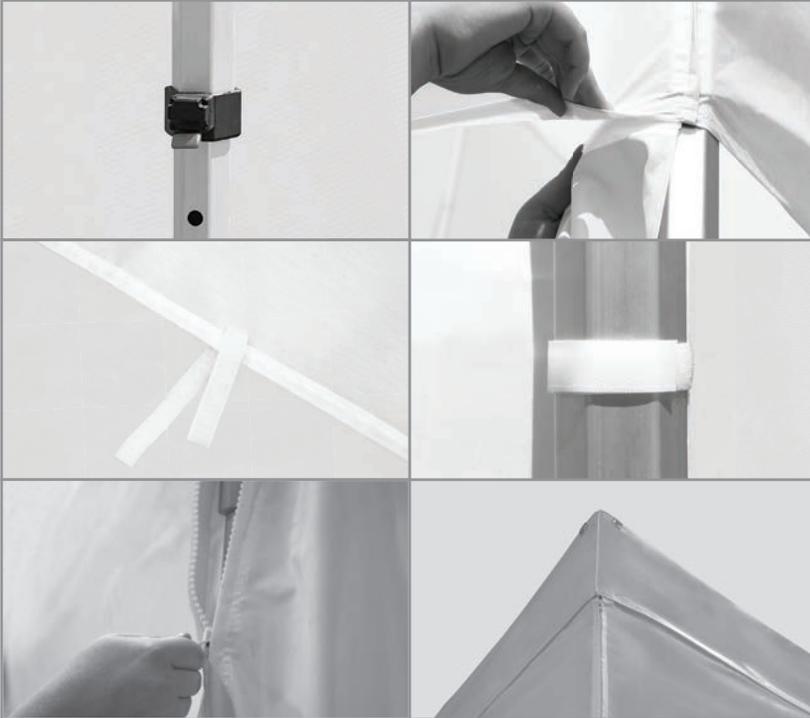

1. When adding the wall(s) to the tent, the legs on the frame (A) must be at their maximum extension height.
2. Attach the wall(s) to the valance on the tent roof using the hook-and-loop adhesive.
3. Secure the sides of the wall(s) by wrapping the hook-and-loop adhesive tabs around the tent legs.
4. If the tent wall features zippers, walls can be connected by closing the zipper from bottom to the top.

ASSEMBLY OF HALF WALL(S) - OPTIONAL

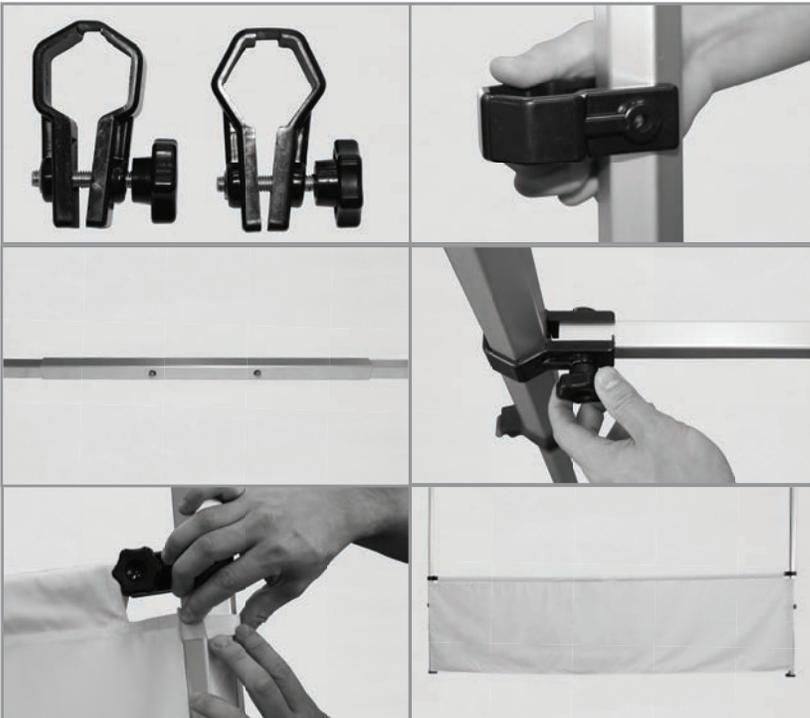

NOTE: If attaching two or more half walls, you MUST stagger the height of ADJOINING half walls.

1. Slide one support pole (D) with the click button into the pole with just holes (C). Once the buttons snap through the first hole repeat this step with the second support pole (D).
2. Slide the half wall support bar through the print's pole sleeve. The support bar should go through the entire pole sleeve, with both ends of the pole sticking out from either end of the half wall.
3. Attach the half wall clamps. Unscrew the knobs completely from the clamps (E) and slip the clamps (E) around the tent legs.
4. Place the appropriate end of the half wall support bar through the opening of the clamp. Place the tightening knob into the open holes and hand tighten the knob. Repeat this step with the second clamp and support pole.
5. Secure the hook-and-loop adhesive tabs of the half walls around the tent legs.



Do not display your Advertising Tent in extreme winds and/or thunderstorms. Do not display near overhead wires. User must read and observe Assembly Instructions. If this is not done correctly, it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if the Advertising Tent's hardware is used with any print not produced by us.

